





RPS-T Firestop pillow

APPLICATION MANUAL

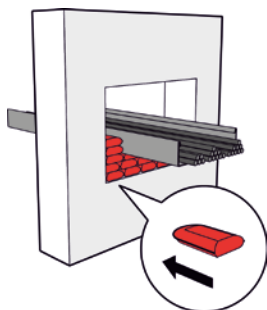


Insert the RPS-T Firestop pillows in the recess so that the long side of the RPS-T Firestop pillows is parallel to the conduit.
The RPS-T Firestop pillows should be fitted as tightly as possible so that there are no joints between:

- the RPS-T Firestop pillows and the recess
- the RPS-T Firestop pillows themselves
- the RPS-T Firestop pillows and the conduit

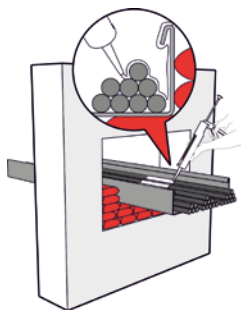

At the site where the RPS-T Firestop pillows are to be inserted, apply RPI-S Filler between the cables and in the profile of the conduit over a width of about 200 mm.

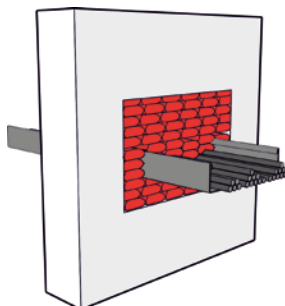

Fill the rest of the recess with RPS-T Firestop pillows until the whole recess is sealed. Here too, pack the RPS-T Firestop pillows in as tightly as possible so that no joints are formed.



Enter your company details on the RPI-S Sealing sticker and display it in a clearly visible place.